
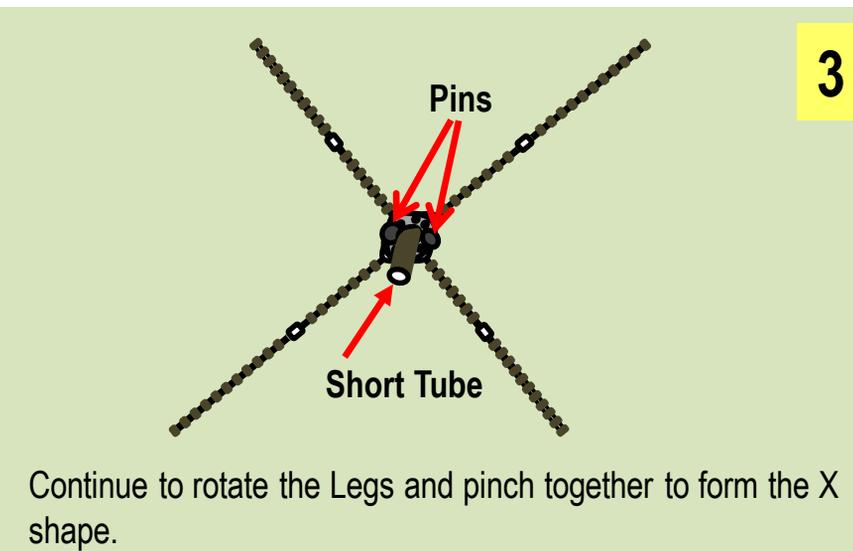
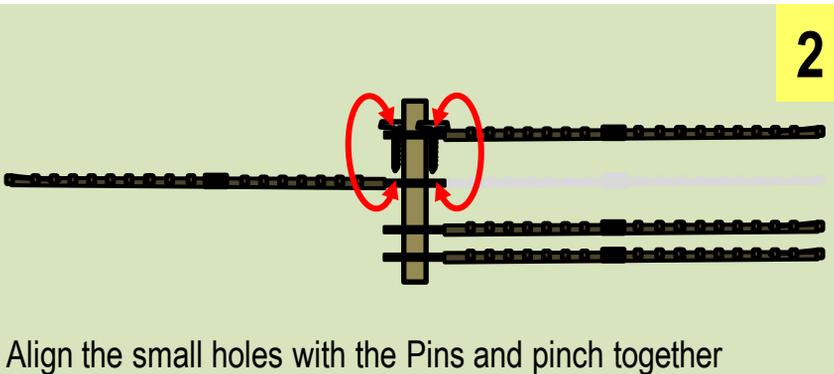
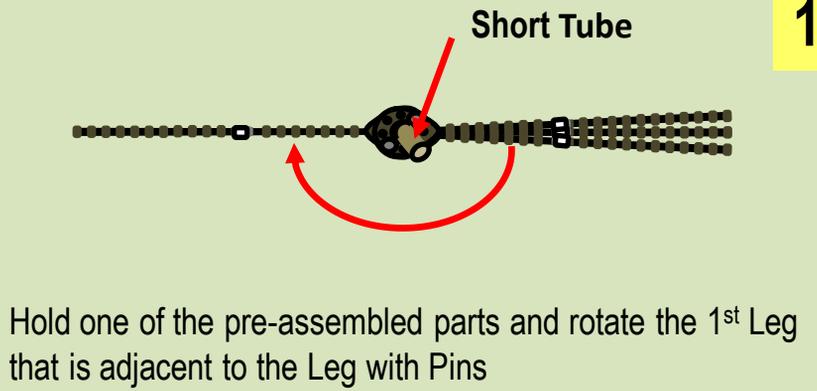


ASSEMBLY INSTRUCTIONS for the BASKET BOOSTER™ KIT for 12" to 16" Containers


Parts Reference

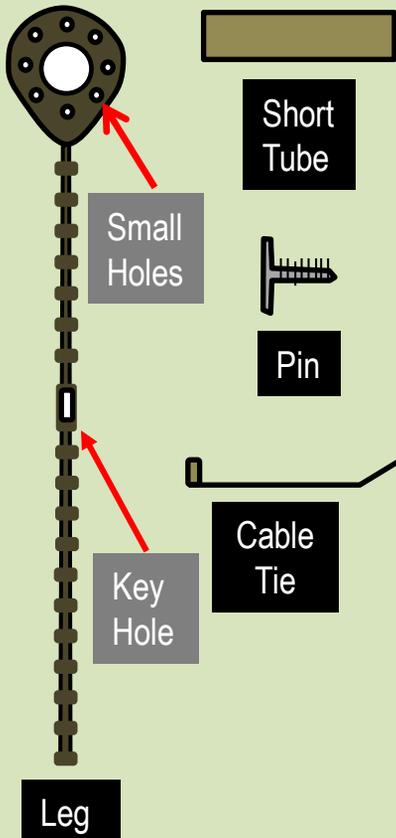

Your Kit will come assembled with two parts shown above


Repeat Steps 1-3 to assemble the second X shape.

Note: Keep the Short Tube in both the X shapes for steps 1 – 3.

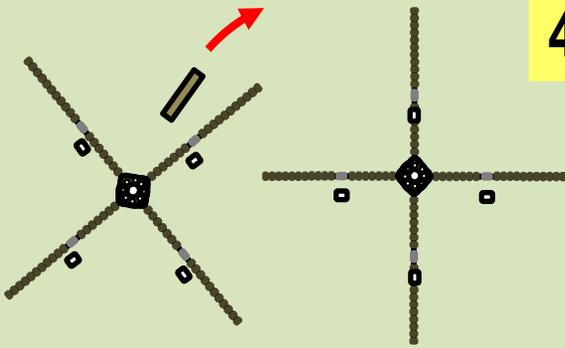


4

Remove the Short Tube from **one** of the X shapes and discard

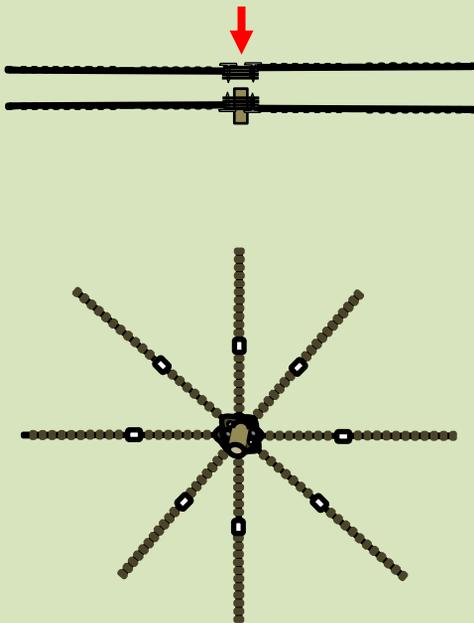

5

Assemble both of the X shapes onto the remaining Short Tube to create the 8 legged Star (The Star's Pins pointed ends point towards each other)

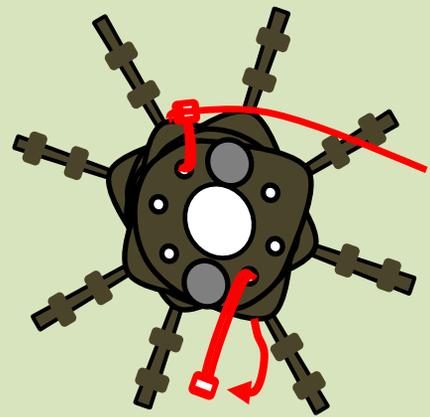

6


Secure the Star by inserting two Cable Ties through the Small Holes that are opposite each other on the Legs.

Wrap the Cable Tie loop to the outer edge and not through the large center hole.

Connect and trim the ends of the Cable Ties as needed.


(Note: The correct way to connect the Cable Tie-See *Below*)

Connecting the Cable Tie Loop

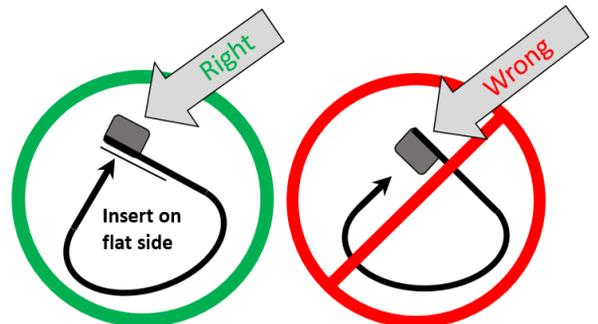

Insert on flat side

7

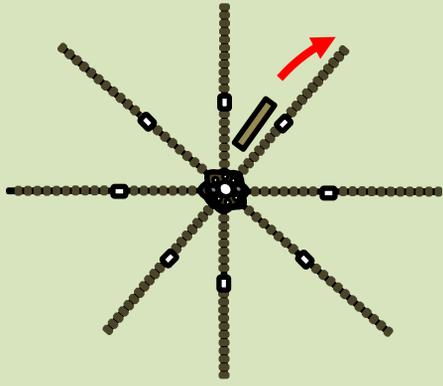

Remove and discard the Short Tube from the Star, plant your pot if you haven't already.


9



Optional solar light strings and bird finials are available and purchased separately.

Patent Pending

8

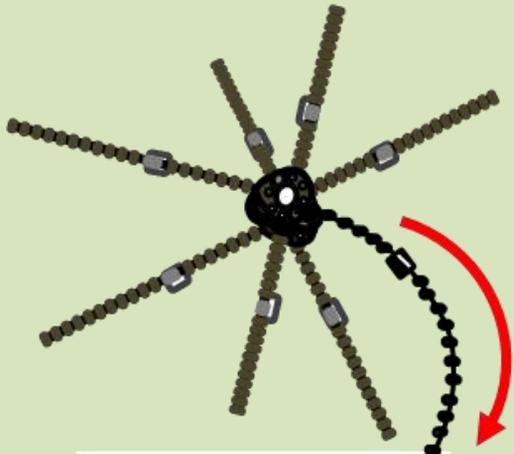

Insert the trellis legs deep into the soil around the inside of the pot making sure that all strands are inserted to the same depth and the Star's center hole is over the center of the container. Use a container that is 12" – 16"



Ipomoea acuminata (Blue Dawn Flower) and Ipomoea variety (in a 12" square container).